






Cosmedico
M E1530 P
Metal halide lamp for
sun tanning equipment

Typical Relative Spectral Radiant Flux

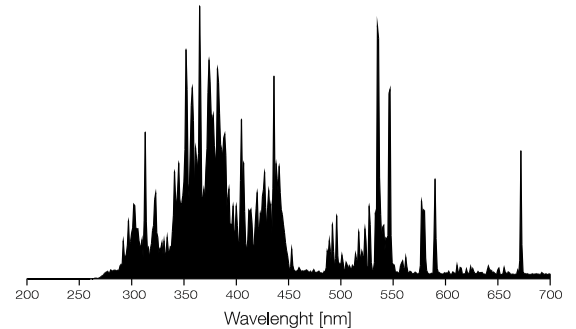

Article-No.	21106
FDA-ACC. No:	
Distance between electrical contacts (A)	128 mm
Lighted length (B)	48 mm
Bulb diameter (C)	Ø 28 mm
Base	pin
Bulb (quartz glass)	FDA
Lamp voltage $U_{Lp.}$	130 V
Current $I_{Lp.}$	9 A
Lamp wattage $P_{Lp.}$	1000 VA
Supply voltage	230 V 50 Hz
Starting voltage	3-4,5 kV
Intial phase	3 min.

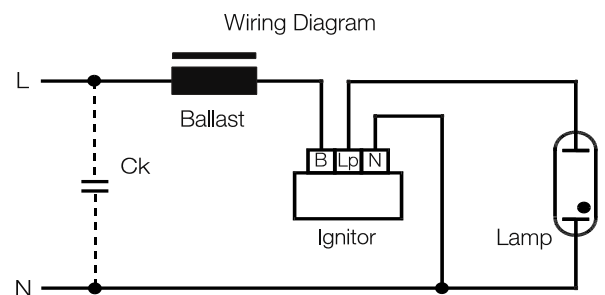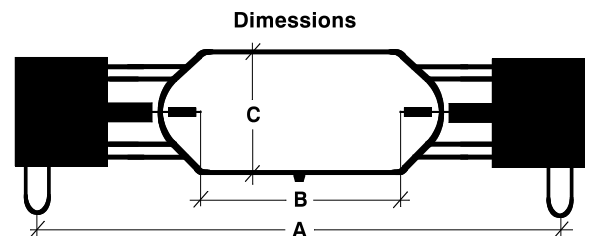

We recommend the ignitor **Cosmopower 5 1000** (#71813) and the ballast **Cosmopower 5 1000W** (#74412/50Hz).

The useful life is determined on the operation condition of the lamp (for example type of ballast / ignitor used, on / off cycle, cooling conditions, etc.). We recommend to change the lamps if the reduction of intensity is down to 75% of its original output.

To avoid failure of the lamps they have to be operated in horizontal position (+/- 30°) with adequate cooling. If the following operating temperatures are exceeded, the lamp may be destroyed:

- bulb temperature $\leq 950\text{ }^{\circ}\text{C}$ and $\geq 750\text{ }^{\circ}\text{C}$
- seal temperature $\leq 350\text{ }^{\circ}\text{C}$

Remove contaminations (e.g. finger-prints) with 100% alcohol!

Please note!

Follow sunlamp equipment manufactures instructions. Tubular metal halide lamps emit a very intensive UV-radiation. Filter and safety glasses must be used as eyes and skin may be damaged within seconds otherwise.